 


# USB Combination Lock, No. 40449






## Overview

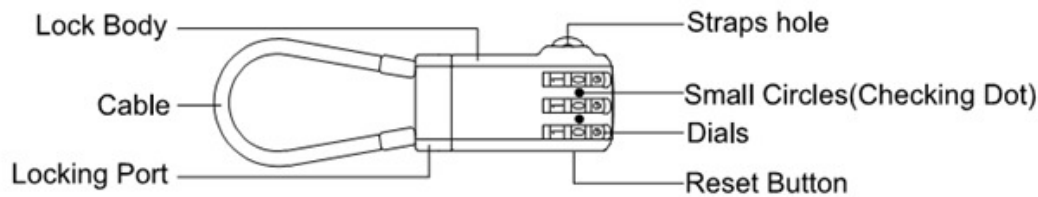



## Setting your combination

1. Turn the dials until 0-0-0 (factory default code) are aligned with the small circles and remove the locking port.
2. Use a pointed object to press the reset button as shown below. Hold the reset button until step 3 is completed.
3. Set the dials to your choice of code and then release the reset button. Please keep your code in a safe place.

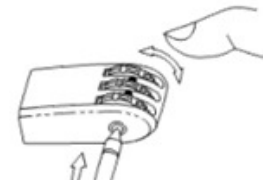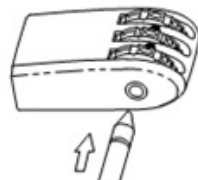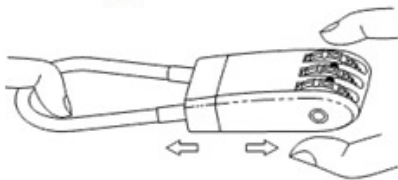

## Operation – USB Lock

1. Set the USB Lock to your combination code and insert a Pen Drive or other USB device.
2. Once inserted turn the dials to another code to lock the device.
3. To unlock simply turn the dials to your code and remove your device.

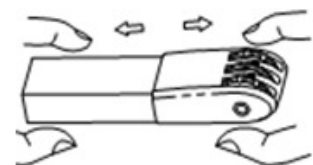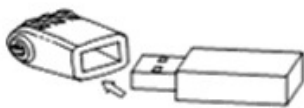

## Operation – Luggage Lock

1. Remove the locking port and slide the movable end of the cable to the release position.
2. Feed the cable through the zip pulls and re-insert the cable in the locking port.
3. Attach the lock body (with your code set) and turn the dials to set the lock.
4. To unlock simply turn the dials to your code and remove the lock port and cable.

