

# LINDY®

## CONNECTION PERFECTION

### iPower Control 2x6M/2x6XM

*User Manual*

*English*



No. 32660 / 32690

[www.lindy.com](http://www.lindy.com)

CE



Introduction

Thank you for purchasing the LINDY 12 Port iPower Control Power Switch. This iPower Switch has two different versions, 32660 measures the power throughput for each bank of six, 32690 measures the power throughput for each port.

Package Contents

- 12 Port iPower Control
- 12 x IEC C13 to C14 Extension Cables ~3m
- 2 x C19 to UK Power Cables ~2m
- CD containing software & manual
- LINDY Manual

Features

- Measure voltage, current, active power, reactive power, apparent power, frequency, phase angle and power factor
- Switching of 12 output loads
- Optional temperature and humidity sensors available
- Two, four digit 7 segment LED displays (for display of current, temperature or humidity)
- Over voltage protection on both inputs
- Control and monitoring via web interface
- Email notifications for power changes and environment changes


Installation



1. 6 plain text displays (on/off) for the state of the outputs (Bank A or B)
2. Current power consumption of the Bank
3. LED indicator notifying if the Bank is connected to mains supply
4. LED indicator for Over Voltage Protection (green - surge protection active, red - inactive)



5. Status LED
6. Select button
7. OK button
8. Ethernet connector (RJ45)
9. External sensor connectors (RJ45)
10. RS232 connector

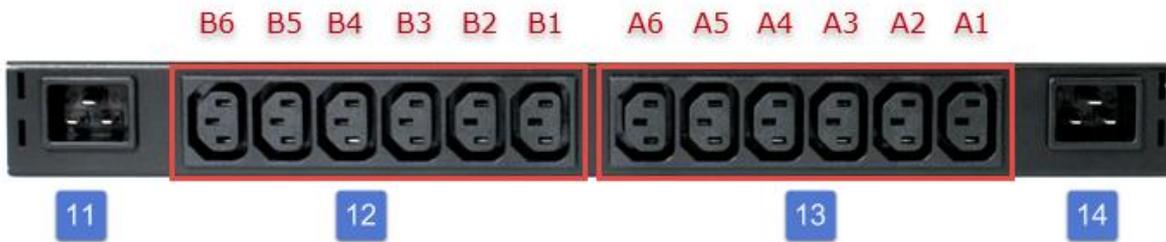


- 11. Mains supply Bank B (IEC C20, max.16A)
- 12. 6 x Load outputs Bank B (IEC C13, max. 16A)
- 13. 6 x Load outputs Bank A (IEC C13, max. 16A)
- 14. Mains supply Bank A (IEC C20, max.16A)

### Starting-up the device

- Connect the two power cords (IEC C19, max. 16A) to the mains supply. Ensure the cables are firmly pushed into the socket to avoid bad power connections.
- Plug the network cable into the Ethernet socket (RJ45).
- If required, setup a serial connection to the RS232 port.
- Insert optional external sensors.
- Connect the output ports (IEC C13, max. 10A) to your devices requiring power


### Dual-Circuit Characteristics

The iPower Control has two different input circuits (Banks A and B). The mains supply A (IEC C20, max. 16A) feeds the current to the load outputs A1 to A6 (IEC C13, max. 10A), mains supply B feeds the current to the load outputs B1 to B6 (IEC C13, max. 10A).

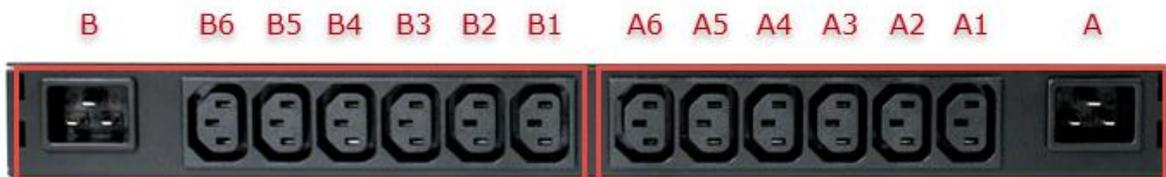

### Twin Port

Two ports of different banks but with the same number can be combined to a "twin port". Then one port always participates in the switching status of the other port. In the screenshot the ports A1 and B1 are combined, symbolized by the chain link icon. The "Connect twin port" option can be found in the chapter "Configuration - Power Ports".

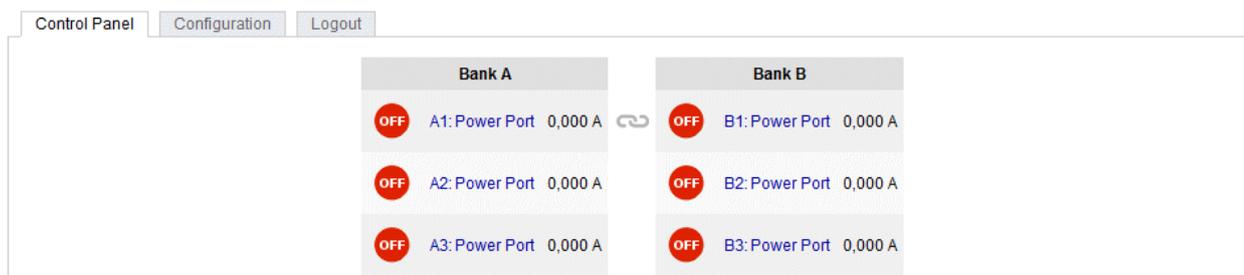

### Current less Bank

If a bank is not receiving power, a red "L" appears on the front panel display, while an operating power supply shows a green "L". In the event of the current, loss all relays are switched off by the electronics, but the "On" and "Off" LEDs still show the state of the relays when the supply was active. This is symbolized by the flashing of the LEDs.

## Overvoltage Protection

The device contains an overvoltage protection for each bank, this is designed to protect the internal electronics and power ports with failure detection. The state of the protection is indicated on the front panel by a green or red flash. A green flash means that the protection is active, a red flash symbolizes that the overvoltage protection has failed. The status of the overvoltage protection can also be seen on the Webpage (HTTP) and acquired with SNMP.

 Once the overvoltage protection function has blown the protective circuits, the device will continue to work but will not provide any further overvoltage protection.

 A signal via e-mail, Syslog or SNMP trap will be sent at the moment in which the protection fails. In addition, at the startup of the device a message is generated, when the overvoltage protection is not active.

## Status LED

The Status LED shows different states of the device:

- Red: Device is not connected to the Ethernet
- Orange: Device is connected to the Ethernet, TCP/IP settings are not allocated
- Green: Device is connected to the Ethernet, TCP/IP settings allocated
- Periodic blinking: Device is in Bootloader mode

## Bootloader Mode

Certain actions can, for safety reasons, only be carried out if the device is in bootloader mode. The following operations are possible only in Bootloader Mode:

- Firmware Update
- Configuration with GBL\_Conf.exe
- Factory Reset

## Activation of the Bootloader Mode

via push button:

- Hold both buttons for 3 seconds (only if the device has 2 buttons)
- or
- Remove the power supply
  - Hold down the button (or the "Select" button for devices with 2 buttons). If the push button is recessed, use a pin or paper clip
  - Connect the power supply

by Software: (only if "Enable FW to BL" was previously activated in GBL\_Conf.exe)

- Start GBL\_Conf.exe
- Do a network search with the "Search" menu action
- Activate in menu "Program Device" the item "Enter Bootloader"

If the device is in bootloader mode, the status LED will be flashing, or it is shown in GBL\_Conf.exe, after a renewed device search, with the appendix "BOOT-LDR" after the device name. In bootloader mode the program GBL\_Conf.exe can disable the password and the IP ACL, perform a firmware update, and restore the factory settings.

**Activation of the bootloader mode and an abandonment of the bootloader does not change the state of the power or output ports as long as the supply voltage is maintained.**

---

## Abandonment of the Bootloader Mode

via push button:

- Hold both buttons for 3 seconds (only if the device has 2 buttons)
- or
- Remove and connect the power supply without pressing a button

by Software:

- Start GBL\_Conf.exe
- Do a network search with the "Search" menu action
- In menu "Program Device" activate the item "Enter Firmware"

## Factory Reset

If the device is in bootloader mode, it can always be put back to its factory default. All TCP / IP settings are reset in this operation.

via push button:

- Activate the Bootloader Mode of the device
- Hold down the button (or the "Select" button for devices with 2 buttons) for 6 seconds. If the push button is recessed, use a pin or paper clip
- The status LED will blink in a fast rhythm, please wait until the LED blinks slowly (about 5 seconds)

by Software:

- Activate the Bootloader Mode of the device
- Start GBL\_Conf.exe
- In menu "Program Device" activate the item "Reset to Fab Settings"
- The status LED will blink in a fast rhythm, please wait until the LED blinks slowly (about 5 seconds)

## Firmware-Update

To perform a firmware update, the program GBL\_Conf.exe and the latest firmware is needed.

- Enable the bootloader mode (see Chapter Bootloader Mode)
- Start GBL\_Conf.exe
- Select the device for which a firmware update is to be performed
- Click "Program Device" and then select there "Firmware Update"
- Specify the firmware file that should be uploaded

Upon completion of the update process, please start the new firmware of the device. You can do this by simply leaving the bootloader mode.

A firmware update, unlike other functions, is not sent as a network broadcast. Therefore, the device must have a valid IP address and a valid netmask before the firmware update. If necessary, please correct the entries in GBL\_Conf.exe in bootloader mode and save them with *"Save Config"*.

If after a firmware update, the web page is not displayed correctly anymore, this may be related to the interaction of JavaScript with an outdated browser cache. It is recommended that you manually delete the cache in the browser options. Alternatively, you can test start the browser in "private mode".

Technical Specifications

Interfaces	1 x Ethernet port (RJ45) 1 x Serial connector (D-SUB, RS232) 2 x Mains supply (IEC C20, max.16A) 2x6 x Load outputs (IEC C13, max. 16A) 2 x RJ45 for external sensor
Network connectivity	10/100 MBit/s 10baseT Ethernet
Protocols	TCP/IP, HTTP, SNMP v1 und v2c, SNMP traps, Syslog, E-Mail (SMTP)
Power Supply	Internal power supply (230V AC / -15% / +10%)
<ul style="list-style-type: none"> <li>▪ Overvoltage Protection</li> <li>▪ Maximum operating voltage</li> <li>▪ Single peak current for 20/80us pulse</li> <li>▪ Max. clamping voltage 20/80us pulse, Ipk = 100A</li> </ul>	20mm/190J varistor disk 275VACrms 10000A 710V
Environment	
<ul style="list-style-type: none"> <li>▪ Operating temperature</li> <li>▪ Storage temperature</li> <li>▪ Humidity</li> </ul>	0°C - 50°C -15°C - 60°C 10% - 85%
Case	Powder coated, galvanized steel sheet
Measurements	19" (inches), 1 Rack Unit, (Depth 195mm)
Weight	approx. 3.0kg

Energy Measurement

Electrical Measurement Specification				
Category	Range	Unit	Resolution	Inaccuracy (typical)
Voltage	110-265	V	0.01	< 1%
Current	0,1 - 16	A	0.001	< 1.5%
Frequency	45-65	Hz	0.01	< 0.03%
Phase	-180 - +180	°	0.1	< 1%
Active power	1 - 4000	W	1	< 1.5%
Reactive power	1 - 4000	Var	1	< 1.5%
Apparent power	1 - 4000	VA	1	< 1.5%
Powerfactor	0 - 1	-	0.01	< 3%
Energy Counter				
Active Energy (total)	9.999.999,9 kWh 99		0.001	< 1.5%
Active Energy (temporary)	9.999.999,9 kWh 99		0.001	< 1.5%

### Operating the device directly

#### Port Switching

The current status of the output is indicated by the color of the LED. Red indicates that the output is off, green shows that the output is on. The device has two buttons, "select" and "ok". If you press "select", the LED will blink for the first output, i.e. the output is selected. Press "select" again to select the next output. Hold down the button "ok" for two seconds, then the status of the selected output is toggled.

#### Display Information

If no port is selected manually, repeatedly pressing the "ok" key will show the IP address and the values of the external sensors on the display.

#### Operating by Web interface

Access the web interface: http://"/"IP address" and log-in.

Control Panel Configuration Logout

Bank A				Bank B			
OFF	A1: Power Port	0,000 A		OFF	B1: Power Port	0,000 A	
OFF	A2: Power Port	0,000 A		OFF	B2: Power Port	0,000 A	
OFF	A3: Power Port	0,000 A		OFF	B3: Power Port	0,000 A	
OFF	A4: Power Port	0,000 A		OFF	B4: Power Port	0,000 A	
OFF	A5: Power Port	0,000 A		OFF	B5: Power Port	0,000 A	
OFF	A6: Power Port	0,000 A		OFF	B6: Power Port	0,000 A	
OVP operational				OVP operational			

Line Id	Name	Voltage AC rms V	Current AC rms A	Freq Hz	Phase °	Power active W	reactive VAR	apparent VA	PF	total Energy active kWh	resettable Energy active kWh	time h:m:s	
L1	Meter1	232,7	0,000	49,98	-68,2	0	1	0	1,00	1,755	0,101	64:56:13	Reset
L2	Meter2	232,7	0,000	49,97	56,7	0	1	0	1,00	0,276	0,024	64:55:47	Reset
sum			0,000			0				2,031	0,125		

show details

The web page provides an overview of the switching state, energy measurement values of the banks "A" and "B", as well as the external sensors, provided that they are connected. When a single port is clicked, a panel with buttons to control a single port will appear:

OFF A1: Power Port [On] [Off] [Reset] [Batch] [Close]

In addition to the panel the measured values of the selected port can be seen:

OFF A1: Power Port [On] [Off] [Reset] [Batch] [Close]

Id	Voltage AC rms V	Current AC rms A	Freq Hz	Phase °	Power active W	reactive VAR	apparent VA	PF	total Energy active kWh	resettable Energy active kWh	time h:m:s	
A1	229,0	0,000	49,97	-91,4	0	1	0	1,00	0,358	0,068	180:00:49	Reset

show details

The ports can be switched manually with the "On" and "Off" buttons. If the port is turned on, it can be turned off by pressing the "Reset" button, until after a delay it turns itself on again. The delay time is determined by the parameter Reset Duration, which is described in the chapter about configuration via web interface. The "Close" button closes the panel again.

**Batchmode**

Each individual port can be set for a selectable period of time to the state "switch on" or "switch off". After the selected time they are automatically switched to the second preselected state.



**Using the Serial Interface**

Alternatively the power ports can be switched by a serial connection. You will need a terminal program such as the free supplied Windows HyperTerminal.

Connect your PC to the device via an RS232 serial cable (9-pin RS232). Start your terminal program and select the COM port to which the RS232 cable is connected. Use the following settings for the serial port:


Baudrate	115200
Databits	8
Parity	No
Stopbits	1
Flow Control	No

If you do not use HyperTerminal, please make sure that your terminal application supports VT100 commands.

If the connection is successful the device will show the image below. Press ENTER to login.



The power ports can be toggled by pressing numerical keys in the terminal program. The character "Z" will show the network settings. To logout, press the Esc key.

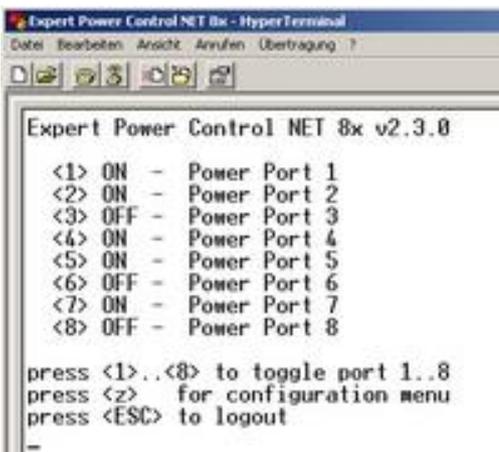

## Configuration


### TCP/IP configuration by DHCP

After switching on, the device will scan the Ethernet for a DHCP server and request an unused IP address. Check an IP address has been assigned and then adjust if necessary, also check that the same IP address is used at each restart. To turn off DHCP use the software GBL\_Conf.exe or use the configuration via the web interface.

To check the network settings with GBL\_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.

### Configuration by Software

To view and change the network settings, you can use the program GBL\_Conf.exe. The program is available from the accompanying CD-ROM. You can also use GBL\_Conf.exe to install firmware updates and trigger a reset to factory defaults.

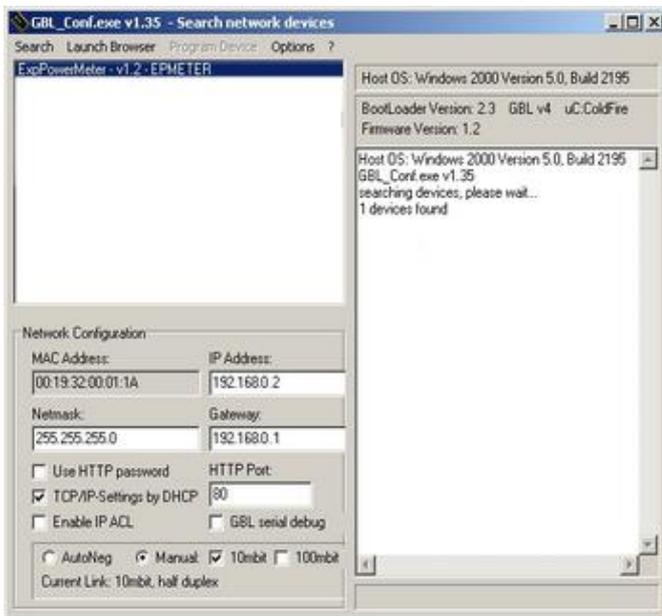

To check the network settings with GBL\_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.

- Activate the Bootloader Mode (see Chapter Bootloader Mode) and choose in menu "Search" the item "Bootloader-Mode Devices only"
- Enter the desired settings in the edit window and save them with "Save Config".
- Deactivate the boot loader mode for the changes to take effect. Select again "All Devices" in the "Search" menu of GBL\_Conf.exe. The new network configuration is now displayed.

### Configuration via Webinterface

Access the web interface: <http://IP-address> and log-in.

Use the "Configuration" Tab to enter the configuration menu.

### Configuration - Power Ports

Control Panel Configuration Logout

[Power Ports](#) · [IP Address](#) · [IP ACL](#) · [HTTP](#) · [Sensors](#) · [SNMP](#) · [Syslog](#) · [E-Mail](#)

### Configuration - Power Ports

- Choose Power Port to configure: A1: Power Port1
- Label: Power Port1
- Initialization status:  on  off  remember last state
- Connect twin port:  yes  no
- Initialization delay: 0 s
- Repower delay: 0 s
- Reset duration: 10 s

---

- Enable watchdog:  yes  no

Apply

Choose Power Port to configure: This field is used to select the power ports to be configured.

Label: You can assign a name up to 15 characters for each of the power ports. Using the name, an identification of the device connected to the port can be facilitated.

### Start-up Monitoring

It is important, that if necessary the condition of the power ports can be restored after a power failure. Therefore each port can be configured with Initialization status to a specific start-up state. This start-up sequence can be carried out delayed by the parameter Initialization Delay. There is in any case a minimum one-second delay between switching of ports.

Initialization status: This is the port state (on, off, remember last state) the port should be set when the device is turned on. The setting "remember last state" saves the last manually set state of the power port in the EEPROM.

Initialization delay: Here can be configured how long the port should wait to switch to its defined state after the device is turned on. The delay may last up to 8191 seconds. This corresponds to a period of approx. two hours and 20 minutes. A value of zero means that the initialization is off.

Repower delay: When this feature is enabled (value greater than 0), the power port will switch itself on again a specified time after it has been disabled. Unlike the "Reset" button this function applies to all switch actions, including SNMP, or an optional serial interface.

Reset Duration: When the "Reset" button is triggered, the device turns the power port off, waits for the time entered here (in seconds) and turns the power port on.

Connect twinport: This option combines two relays of the same number of Bank A and Bank B. E.g. A2 and B2. By this connection a port always adopts the status of the connected port, so that both ports always have the same switching state.

### Configuration - Watchdog

The watchdog feature allows you to monitor various remote devices. Either ICMP pings or TCP pings are sent to the device to be monitored. If these pings are not answered within a certain time (both the time

and the number of attempts can be set), the port is reset. This allows you to automatically restart a non-responsive server or NAS systems.

When a watchdog is activated it presents information in the Control Panel. The information is color-coded.

Green text: The watchdog is active and regularly receives ping replies.

Orange text: The watchdog is currently enabled, and waits for the first Ping response.

Red text: The watchdog is active and receives no ping replies anymore from the configured IP address.

After the watchdog has been enabled, the display remains orange until the watchdog receives a ping response for the first time. Only then the watchdog is activated. Even after triggering a watchdog and a subsequent power port reset, the display will remain orange until the device is rebooted and responds again to ping requests. This will prevent a premature watchdog reset of the port, e.g. when a server needs a long time for a file check.

You can monitor devices on your own network, as well as devices on an external network, e.g. the operating status of a router.

Enable watchdog: Enables the watchdog function for this Power Port.

Watchdog action: When selecting *reset*, the Port will be turned off and switched on again after a Reset Duration.

Watchdog type: Here you can choose between the monitoring by ICMP pings or TCP pings.

- ICMP Pings: The classic ping (ICMP echo request). It can be used to check the accessibility of network devices (for example, a server).
- TCP Pings: With TCP pings, you can check if a TCP port on the target device would accept a TCP connect. Therefore a non-blocked TCP port should be selected. A good choice would be port 80 for http or port 25 for SMTP.

Hostname: The name or IP address of the monitored network device.

TCP port: Enter the TCP port to be monitored. When using ICMP pings this is not needed.

Ping interval: Select the frequency (in seconds) at which the ping packet is sent to each network device to check its operating status.

Ping retries: After this number of consecutive unanswered ping requests the device is considered inactive.

Retry BOOTING after RESET failure: **Be careful, only switch this setting to "yes", if the appliance to be monitored doesn't require a long boot time.**

Normally (default setting is no) the watchdog monitors the connected device. When the watchdog is activated, because the device is not answering, the pre-selected watchdog action is executed. Now the watchdog waits until the monitored device is answering to pings again. After this the watchdog is armed again. When you select the option retry BOOTING after RESET failure, the watchdog is armed **directly** after the watchdog action is executed.

**NOTE:** If the Port to be monitored has a server connected, that is in need for a long boot process, because it is doing a file system check, the server would probably exceed the tripping time of the watchdog. The server would be switched off and on again, and the file system check is restarted. This would be repeated endlessly.

retry Boot after N ping timeouts: If retry BOOTING after RESET failure is enabled, the device waits N Ping intervals until the connected device is switched off and on again.

• Enable watchdog:	<input checked="" type="radio"/> yes <input type="radio"/> no
• Watchdog action:	<input checked="" type="radio"/> reset <input type="radio"/> off
• Watchdog type:	<input checked="" type="radio"/> ICMP <input type="radio"/> TCP
• Hostname:	<input type="text"/>
• Ping interval:	<input type="text" value="10"/> s
• Ping retries:	<input type="text" value="6"/>
• retry BOOTING after RESET failure:	<input type="radio"/> no <input checked="" type="radio"/> yes
• retry Boot after N ping timeouts:	<input type="text" value="10"/>

### Configuration - IP Address

Control Panel Configuration Logout

[Output Ports](#) · [Input Ports](#) · [IP Address](#) · [IP ACL](#) · [GSM](#) · [HTTP](#) · [SNMP](#) · [Syslog](#) · [E-Mail](#)

#### Configuration - IP Address

• Hostname:	<input type="text" value="enc-2190"/>
• IP Address:	<input type="text" value="192.168.1.223"/>
• Netmask:	<input type="text" value="255.255.255.0"/>
• Gateway address:	<input type="text" value="192.168.1.3"/>
• DNS address:	<input type="text" value="192.168.1.5"/>
• Use DHCP:	<input checked="" type="radio"/> yes <input type="radio"/> no

Hostname: Here you can enter a name with up to 15 characters. This name will be used for registration on the DHCP server. Special characters and umlauts can cause problems in the network.

IP Address: The IP address of the device.


Netmask: The network mask used in the network.

Gateway address: The IP address of the gateway.

Use DHCP: Select "yes" if the TCP/IP settings should be obtained directly from the DHCP server: When the function is selected, each time the device powers up it is checked if a DHCP server is available on the network. If not, the last used TCP/IP setting will be used further.

**All IP changes will take effect immediately; there is no need for a restart of the firmware.**

### Configuration - IP ACL

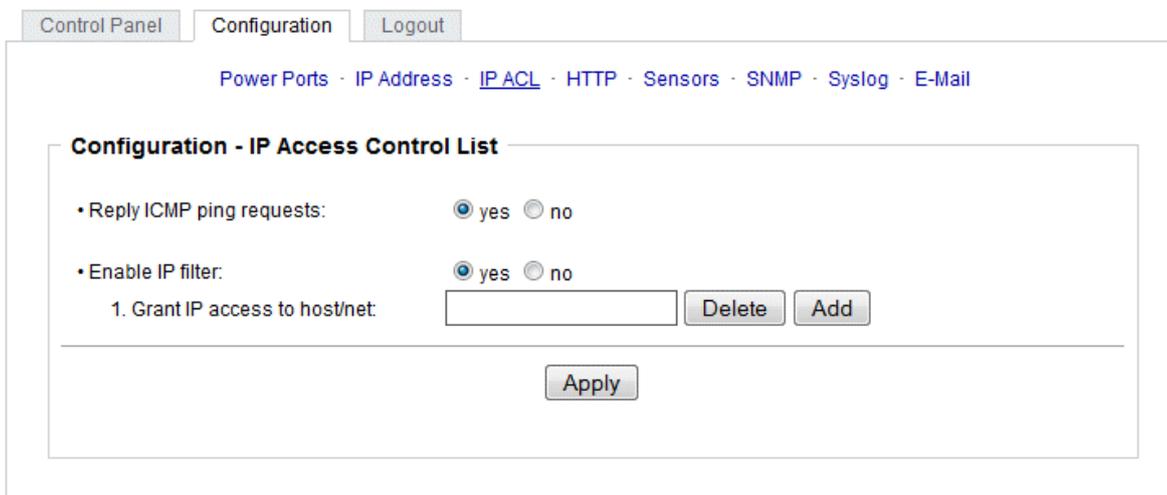

Reply ICMP ping requests: If you enable this feature, the device responds to ICMP pings from the network.

Enable IP filter: Enable or disable the IP filter here. The IP filter represents an access control for incoming IP packets.

**Please note that when IP access control is enabled DHCP and SNMP only work if the appropriate servers and clients are registered in the IP access control list.**

### IP Access Control List

The IP Access Control List (ACL IP) is a filter for incoming IP packets. If the filter is active, you can only connect to hosts and subnets whose IP addresses are entered in the list.

Examples:

Entry in the IP ACL	Meaning
192.168.0.123	the PC with IP Address "192.168.0.123" can access the device
192.168.0.1/24	all devices of subnet "192.168.0.1/24" can access

If you choose a wrong IP ACL setting and locked yourself out, please activate the Bootloader Mode and use GBL\_Conf.exe to deactivate the IP ACL.

### Configuration - HTTP

Control Panel Configuration Logout

Power Ports · IP Address · IP ACL · HTTP · Sensors · SNMP · Syslog · E-Mail

**Configuration - HTTP**

- HTTP port:
- Enable HTML autorefresh:  yes  no
- Require HTTP password:  yes  no
  - Set new **admin** password:  (32 characters max)
  - Repeat **admin** password:
  - Set new **user** password:  (32 characters max)
  - Repeat **user** password:

Apply

HTTP port: Here can be set the port number of the internal HTTP. Possible values are from 1 to 65534 (default: 80). If you do not use the default port, you must append the port number to the address with a colon to address the device from a web browser. Such as: "http://192.168.0.2:800"

Enable auto refresh HTML: If this is activated, the information of the status page is automatically updated via http request (AJAX).

Require HTTP password: If desired, an http password protection can be enabled. In this case, an admin password and a user password can be assigned. The password can have up to 15 characters. User can log in by entering the user's password to query the status information and make changes to ports (if applicable). Admins have the privileges of a User and can change the Configuration settings. In the username field of the password input mask the names "admin" and "user" are supported. In the factory defaults the password for the admin is set to "admin" and "user" for the user password.

**If you have forgotten your password, please activate the bootloader mode and then turn off the password prompt in GBL\_Conf.exe.**

### Configuration - Sensors

Choose power meter: Selects the measurement of Bank A or B.

Power meter name: The configurable name that will be displayed on the overview page under "Line Name".

Generate AC current messages: Enables the generation of AC current messages.

Maximum/Minimum value: Adjustable limits for current levels (high and low), which sends alerts via SNMP traps, syslog or e-mail.

Hysteresis: This describes the margin of when an event is generated after the measured value has crossed the chosen limit.

Choose sensor port: Selects a type of sensor to configure it. The first digit "1" indicates the number of the sensor port (only important for devices with more than one sensor port). This is followed by the

sensor name (e.g. 7002 for the hybrid sensor), a letter for the sub-type sensor and the changeable sensor name. The sensor subtypes are defined as: "T" = temperature, "H" = humidity, "I" = sensor input.

Sensor Name: Changeable name for this sensor. Temperature and humidity can have different names, even if they are from the same sensor.

Generate messages: Enables the generation of sensor messages.

Maximum/Minimum value: Here you can choose whether, and at what Maximum/Minimum temperature or humidity measurements limits the alerts are send via SNMP traps, syslog or email.

Hysteresis: This describes the margin of when an event is generated after the measured value has crossed the chosen limit.

Min/Max measurement period: Selects the time range for the sensor min/max values on the overview web page.

Default Display: Selects whether the power (Current) of the two Banks is shown in the LED display, or the value of an external sensor.

Control Panel Configuration Logout

Power Ports · IP Address · IP ACL · HTTP · Sensors · SNMP · Syslog · E-Mail

**Configuration - Sensors**

• Choose power meter: A: Meter-A ▾

• Power meter name: Meter-A

• Generate AC current messages:  yes  no

• Enable alarm with beeper:  yes  no

• Maximum value: 30.0 A

• Minimum value: 0.0 A

• Hysteresis: 1.0 A

---

• Choose sensor port: 1: 7002.T Temperature ▾

• Sensor name: Temperature

• Generate messages:  yes  no

• Enable alarm with beeper:  yes  no

• Maximum value: 10 °C

• Minimum value: 0 °C

• Hysteresis: 1 °C

---

• Min/Max measurement period: 24 Hours ▾

• Default display: Current ▾

Apply

**Hysteresis Example:**

A Hysteresis value prevents that too much messages are generated, when a sensor value is jittering around a sensor limit. The following example shows the behavior for a temperature sensor and a hysteresis value of "1". An upper limit of "50 °C" is set.

Example:

- 49.9 °C - is below the upper limit
- 50.0 °C - a message is generated for reaching the upper limit
- 50.1 °C - is above the upper limit

- 49.1 °C - is below the upper limit, but in the hysteresis range
- 49.0 °C - is below the upper limit, but in the hysteresis range
- 48.9 °C - a message is generated for under running the upper limit inclusive hysteresis range

### Configuration - SNMP

SNMP-get: Enables the acceptance of SNMP-GET commands.

Community public: The community password for SNMP GET requests.

SNMP-set: Enables the acceptance of SNMP-SET commands.

Community private: The community password for SNMP SET requests.

MIB table: The download link to the text file with the MIB table for the device.

Send SNMP traps: Activates the usage of SNMP traps.

SNMP v1: SNMP traps are sent in SNMP v1 format.

SNMP v2c: SNMP traps are sent in SNMP v2c format.

SNMP trap receiver: You can insert here up to eight SNMP trap receiver.

The screenshot shows the 'Configuration - SNMP' web page. At the top, there are navigation tabs: 'Control Panel', 'Configuration', and 'Logout'. Below these is a breadcrumb trail: 'Power Ports · IP Address · IP ACL · HTTP · Sensors · SNMP · Syslog · E-Mail'. The main content area is titled 'Configuration - SNMP' and contains the following settings:

- Enable SNMP options:  SNMP-get  SNMP-set
- Community public:
- Community private:
- SNMP traps:  Send SNMP traps
  - SNMP trap version:  SNMP v1  SNMP v2c
  - SNMP trap receiver 1 :

At the bottom of the configuration area is an  button and a link for 'MIB table'.

### Configuration - Syslog

Enable Syslog: Enables the usage of Syslog Messages.

Syslog Server: If you have enabled Syslog Messages, enter the IP address of the server to which the syslog information should be transmitted.

The screenshot shows the 'Configuration - Syslog' web page. At the top, there are navigation tabs: 'Control Panel', 'Configuration', and 'Logout'. Below these is a breadcrumb trail: 'Power Ports · IP Address · IP ACL · HTTP · Sensors · SNMP · Syslog · E-Mail'. The main content area is titled 'Configuration - Syslog' and contains the following settings:

- Enable Syslog:  yes  no
- Syslog server:

At the bottom of the configuration area is an  button.

## Configuration - E-Mail

Control Panel Configuration Logout

Power Ports · IP Address · IP ACL · HTTP · Sensors · SNMP · Syslog · E-Mail

**Configuration - E-Mail**

• Enable E-Mail:  yes  no

• E-Mail server:

• Sender address:

• Recipient address:

---

• Enable authentication:  yes  no

• Username:

• Set new password:

• Repeat password:

**Enable E-Mail:** Activates the email dispatch of messages.

**E-Mail Server:** The SMTP IP-address of the e-mail server. Either as FQDN, e.g.: "mail.gmx.net", or as IP-address, e.g.: "213.165.64.20". If required, attach a designated port, e.g.: "mail.gmx.net:25".

**Sender address:** The e-mail address of the sender.

**Recipient address:** The e-mail address of the recipient.

**Enable authentication:** Select this option if the e-mail server requires authentication.

**Username:** User name that is registered with the SMTP e-mail server.

**Set new password:** Enter the password for the login to the e-mail server.

**Repeat password:** Enter the password again to confirm it.

## Protocols

### SNMP

SNMP can be used to obtain status information via UDP (port 161). Supported SNMP commands are:

- GET
- GETNEXT
- GETBULK
- SET

To query via SNMP you need a Network Management System, such as HP OpenView, OpenNMS, Nagios, etc., or the command line tools of the Net-SNMP software.

### SNMP-communities

SNMP authenticates requests by communities. A community is a string that acts like a password for a read or a write SNMP access. Since these passwords are sent unencrypted and are easily intercepted with IP sniffers, it is recommended to use a safe network structure (DMZ) when security is required.

### MIB

The values that can be read from the device or changed, the so-called "Managed Objects", are described in Management Information Bases (MIBs). The MIB table is built of substructures that are

called OIDs (Object Identifiers). An OID number indicates the location of a value within the MIB tree. Each OID may alternatively be referred to with its symbol name (subtree name).

### SNMP Traps

SNMP Traps are system messages that are sent via the SNMP protocol to different recipients. SNMP traps are triggered by the following events:

- Switching of the Power Ports
- Exceeding the max / min values of attached sensors
- State change of digital sensor input ports
- Exceeding max / min values of the measured power consumption
- Condition change of overvoltage protection

### Syslog

Syslog messages are simple text messages that are sent via UDP to a syslog server. Under Linux, normally a syslog daemon is already running (e.g. syslog-ng), for Microsoft Windows systems some freeware programs are available on the market. The syslog messages are sent for the following events:

- Turning on the device
- Enable/disable of syslog in the configuration
- Switching of the Power Ports
- Exceeding the max / min values of attached sensors
- State change of digital sensor input ports
- Exceeding max / min values of the measured power consumption
- Condition change of overvoltage protection

### Email

Currently, only SMTP servers are supported, that are offering no authentication (open-relay) or unencrypted authentication (PLAIN). An encrypted authentication to the SMTP server is not possible.

An experienced user can learn whether the desired SMTP server understands the PLAIN authentication, by sending the string "EHLO localhost" with Telnet to the server. Here's an example:

```
$ telnet smtp.1und1.com 25
Trying 212.227.15.129...
Connected to smtp.1und1.com.
Escape character is '^]'.
220 smtp.1und1.com (mreu3) Welcome to Nemesis ESMTP server
EHLO localhost          <---- *TYPE* *THIS*
250-smtp.1und1.com
250-STARTTLS
250-AUTH LOGIN PLAIN    <---- *PLAIN* *SUPPORTED!*
250-AUTH=LOGIN PLAIN
250-SIZE 120000000
250 HELP
```

Email messages are triggered by the following events:

- Switching of the Power Ports
  - Exceeding the max / min values of attached sensors
  - State change of digital sensor input ports
  - Exceeding max / min values of the measured power consumption
  - Condition change of overvoltage protection
-

## **CE Statement**

---

### ***CE Certification***

This equipment complies with the requirements relating to Electromagnetic Compatibility Standards EN55022/EN55024 and the further standards cited therein. It must be used with shielded cables only. It has been manufactured under the scope of RoHS compliance.

### ***CE Konformitätserklärung***

Dieses Produkt entspricht den einschlägigen EMV Richtlinien der EU für IT-Equipment und darf nur zusammen mit abgeschirmten Kabeln verwendet werden.

Diese Geräte wurden unter Berücksichtigung der RoHS Vorgaben hergestellt.

Die formelle Konformitätserklärung können wir Ihnen auf Anforderung zur Verfügung stellen

---

### **LINDY Herstellergarantie – Hinweis für Kunden in Deutschland**

LINDY gewährt für dieses Produkt über die gesetzliche Regelung in Deutschland hinaus eine zweijährige Herstellergarantie ab Kaufdatum. Die detaillierten Bedingungen dieser Garantie finden Sie auf der LINDY Website aufgelistet bei den AGBs.

---

### **Hersteller EU / EU Manufacturers**

LINDY-Elektronik GmbH  
Markircher Str. 20  
DE-68229 Mannheim  
GERMANY  
T.: +49 (0)621 47005 0  
info@lindy.de

LINDY Electronics Ltd.  
Sadler Forster Way  
Teesside Industrial Estate, Thornaby  
Stockton-on-Tees, TS17 9JY  
United Kingdom  
T: +44 (0) 1642 754000  
postmaster@lindy.co.uk

## Recycling Information

---



### **WEEE (Waste of Electrical and Electronic Equipment), Recycling of Electronic Products**

#### **Europe, United Kingdom**

In 2006 the European Union introduced regulations (WEEE) for the collection and recycling of all waste electrical and electronic equipment. It is no longer allowable to simply throw away electrical and electronic equipment. Instead, these products must enter the recycling process.

Each individual EU member state has implemented the WEEE regulations into national law in slightly different ways. Please follow your national law when you want to dispose of any electrical or electronic products. More details can be obtained from your national WEEE recycling agency.

#### **Germany / Deutschland**

Die Europäische Union hat mit der WEEE Direktive Regelungen für die Verschrottung und das Recycling von Elektro- und Elektronikprodukten geschaffen. Diese wurden im Elektro- und Elektronikgerätegesetz – ElektroG in deutsches Recht umgesetzt. Dieses Gesetz verbietet das Entsorgen von entsprechenden, auch alten, Elektro- und Elektronikgeräten über die Hausmülltonne! Diese Geräte müssen den lokalen Sammelsystemen bzw. örtlichen Sammelstellen zugeführt werden! Dort werden sie kostenlos entgegen genommen. Die Kosten für den weiteren Recyclingprozess übernimmt die Gesamtheit der Gerätehersteller.

#### **France**

En 2006, l'union Européenne a introduit la nouvelle réglementation (DEEE) pour le recyclage de tout équipement électrique et électronique.

Chaque Etat membre de l' Union Européenne a mis en application la nouvelle réglementation DEEE de manières légèrement différentes. Veuillez suivre le décret d'application correspondant à l'élimination des déchets électriques ou électroniques de votre pays.

#### **Italy**

Nel 2006 l'unione europea ha introdotto regolamentazioni (WEEE) per la raccolta e il riciclo di apparecchi elettrici ed elettronici. Non è più consentito semplicemente gettare queste apparecchiature, devono essere riciclate. Ogni stato membro dell' EU ha tramutato le direttive WEEE in leggi statali in varie misure. Fare riferimento alle leggi del proprio Stato quando si dispone di un apparecchio elettrico o elettronico.

Per ulteriori dettagli fare riferimento alla direttiva WEEE sul riciclaggio del proprio Stato.

LINDY No 32660/32690

1<sup>st</sup> Edition, June 2015

[www.lindy.com](http://www.lindy.com)

